

·jmc·  
lutherie



# JMC Nomade

User Manual

## Table of Contents

	Page
Introduction _____	3
What the JMC Nomade will offer you _____	4
Technical details _____	5
How to start _____	6
Safety and disclaimers _____	7
Power _____	8
The placement of your JMC Nomade _____	9
Maintenance of your musical instrument _____	10
Warranty, delivery and return _____	11
Contact _____	12

D'autres langues disponibles online ou sur demande au siège.

Andere Sprachen erhältlich online oder auf Anfrage beim Sitz der Firma.



## JMC Nomade, the transportable Bluetooth loudspeaker using lutherie techniques of the 21st century

Do you like to be free to listen to your music?

Your JMC Nomade is a transportable loudspeaker equipped with a Bluetooth connection. Originally and classically manufactured, the active speaker delivers a warm, powerful and airy sound to satisfy the most demanding music lovers. The own aesthetic way in which it has been developed makes it nice and easy to integrate the object in any environment as it is timeless. The JMC Nomade represents our mission: using lutherie techniques of the 21st century; tradition associated with the most recent technology. The JMC Nomade is a symbol of the expectations of music lovers who share our spirit: *From Sound to Music*, transform sound harmoniously in music and evoke emotion.



## What the JMC Nomade will offer you

### **A seductive sound silhouette**

The sound, consistent and pervasive, gives that little extra that characterizes JMC's products. A charm due to the sound performance objective associated with the subtle emotional contribution related to musical instruments. The noble materials of which the JMC Nomade is made are the same as those chosen by the luthier for its music instruments, particularly the 350 year old resonance spruce of Risoud Forest for the pavilion and Swiss walnut wood for the housing. Designed by Jeanmichel Capt, the JMC Nomade is the perfect combination between audio performance and emotion.

### **Accurate bass**

The JMC Nomade is equipped with probably the smallest bass reflex subwoofer that exists. This decision is the reason that the loudspeaker sounds airy and accurate, which connects perfectly the high and middle tones issued by the horn.

### **The JMC Nomade is ideal for listening in freedom**

At a fixed location or as mobile station, the JMC Nomade delivers its harmonies in all situations: on the terrace, on the road, outdoors or placed on furniture inside your house. Its sober aesthetic allows it to be conspicuously inconspicuous, and thus claims its identity without invading the space other than through his music.

## Technical details


- Nomadic Bluetooth speaker
- RN 52 3.0 Bluetooth connection
- Line-in (3.5 mm stereo-jack plug)
- Playback frequency of 60 Hz to 20'000 Hz
- Battery life of minimum 9 hours at 2/3 power max. (85 DbA / 1 m)
- 98 DbA white noise / 1 meter before distortion
- 1 HP 3 inch Kevlar membrane, 20 WRMS / 4 Ohms
- 1 HP 1,8 inch aluminium membrane, 4 WRMS / 4 Ohms
- Weight 1.8 kg
- Average charging time 2 hours
- Batteries of 2'300 Ma / h / 7,4 V



## How to start

Before using this device, please read the following sections carefully: 'Safety and Disclaimers'.

1. To connect your device with Bluetooth, push the On/Off button. When the light is on, select 'JMC Nomade' on your smartphone or tablet and connect the two devices. If you want to use another source, it is important to disconnect the previous source completely before connecting the new source.
2. You can change the volume through you smartphone or tablet, or directly through the JMC Nomade. It is advised to set the volume of your source at a high level and to use the volume buttons of the JMC Nomade to change the volume.
3. If your source doesn't have a Bluetooth connection, you can connect through a cable using the mini jack stereo entry of the JMC Nomade. In this case the volume buttons of the JMC Nomade are deactivated and you can change the volume through your source.
4. You will be able to push the pause button in order to put the JMC Nomade in stand-by mode at any time. This enables you to answer your telephone for example.

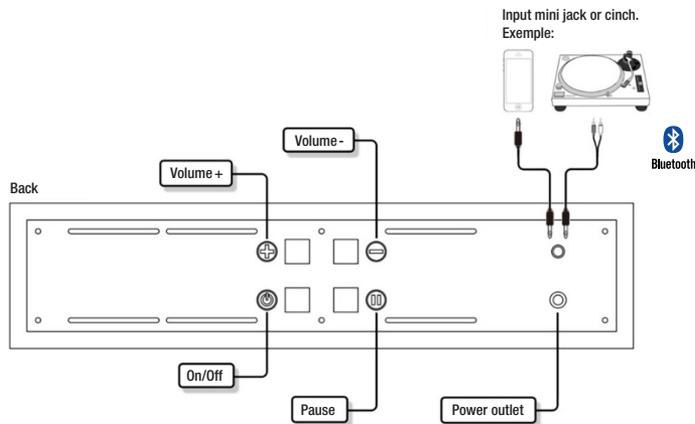

## Safety and disclaimers

Don't open the device and never modify anything inside. Don't try to repair or replace anything. If maintenance is needed, please contact your dealer or JMC Lutherie. To prevent malfunction and/or damage to the speakers or other devices, always turn down the volume, and turn off the devices before connecting to any other device. Before turning the power on or off, turn down the volume first. Even with the volume down, you may hear some noises when you turn on the power or switch it off. This does not indicate a malfunction.

### Never use the JMC Nomade under the following circumstances:

- In extreme temperatures (exposed to direct sunlight in an enclosed vehicle or near a heating device).
- When exposed to moisture, rain or fogged (bathrooms, toilets, wet floors).
- When exposed to dust, sand, salt or smoke.
- When exposed to flammable products.
- When it is submitted to strong vibrations or on an inclined slope.
- Do not place any item containing liquid on the device.
- Avoid at all costs objects (e.g., flammable objects, coins, wires) or liquid (e.g. water, fruit juice) entering inside the unit.
- When the power cord or plug is damaged.
- When smoke or unusual odor is emitted.
- If the device does not operate normally or decreased performances have been a marked.

All these circumstances may cause a short circuit, a malfunction of the device or other inherent problem. In these cases turn off the power immediately, unplug the power cord from the outlet and request servicing by your retailer or JMC Lutherie.

## Power

The device must only be plugged into an electrical outlet of the type described on its back. Only use only the dedicated power adaptor supplied with the JMC Nomade. The device must be positioned in a way that sufficient ventilation from the back occurs. Take only the plug of the power transformer when connecting or disconnecting to a power outlet or the device. Disconnect the power plug when the JMC Nomade will not be used for an extended period of time. Never twist or bend the power cord excessively and do not place heavy objects on it. Damaged cords risk fire and electrical shocks.

### Disclaimers

- Do not connect the device into the same outlet as electrical appliances controlled by an inverter (e.g. refrigerator, washing machine, microwave, air conditioner), or devices that contain a motor as this can cause an induced noise that may cause a malfunction or produce an audible noise. If, for practical reasons, you cannot use a separate electrical outlet, connect a noise filter between the JMC Nomade and the electrical outlet.
- Before connecting the device to any other equipment, turn them all off. This will help to prevent malfunctions and/or damage to speakers or other devices.
- Do not force the unit's power cord into an outlet. Be especially careful when using extension cords: the total power used by all devices connected to the outlet of the extension cord may never exceed the power rating (watts/amps) of the extension cord.
- The accumulation of dust between the plug and the power outlet can result in a poor connection and can cause a fire.

## The placement of your JMC Nomade

Your JMC Nomade was developed with resonance spruce for over 350 years old and Swiss walnut using lutherie techniques of the 21st century. The device is assembled by gluing and painting the wood with varnish which doesn't alter the vibration. It is important to take care of your JMC Nomade like a musical instrument. This means that you should not install it near a heat source or behind a window exposed to direct sunlight. The device must be positioned that the back will be sufficiently ventilated.

### Disclaimers

- When you use the device near power amplifiers (or other equipment containing large power transformers) and near wireless communication devices, such as cellular telephones, humming or any other noise can be heard. To solve this problem, please change the orientation of the device, move it away from the source of interference or move away the concerned wireless devices.
- Do not expose the JMC Nomade to direct sunlight, do not place it near any heat generating equipment, do not leave it inside an enclosed vehicle and do not expose it to high temperatures.
- If you move the device to a location where the temperature and/or humidity is very different, condensation can be formed inside the JMC Nomade. If you use it under these conditions, you may damage it or cause malfunctions. You must therefore wait a few hours to make sure that the condensation has evaporated before using the device again.
- Depending on the material and temperature of the surface on which you place the unit, it is possible that the rubber feet discolor or mark the surface. To avoid this, you can insert a piece of felt or cloth under the rubber feet. In doing so, make sure the JMC Nomade will not slip or move accidentally.

## Maintenance of your musical instrument

It is important to check the humidity level of the place where you will listen to your JMC Nomade. We advise to keep a minimum level of 40%. We recommend to use a soft cloth, slightly humidified, to clean the JMC Nomade if necessary. Don't use detergents (to preserve the natural satin finish), and never use any chemical product as this will alter the polish. Never collide the JMC Nomade with any hard object. This will not have an influence on the sound, but it will leave marks on your device.

Before cleaning the JMC Nomade, make sure that the device has been turned off and that the cables are disconnected. We advise you to disconnect the JMC Nomade at the moment there is a risk of thunder and lightning in your area.

### Repairs

Contact an official distributor or JMC Lutherie directly. Returns are only possible by prior agreement and in the original packaging.

### Recycling

At your retailer or directly at the JMC Lutherie headquarters.

## Warranty, delivery and return

### Warranty

JMC Lutherie guarantees the quality of its products. The warranty may only be issued by JMC or by its official distribution network. It is valid for two years as of the date of purchase, and only for JMC instruments and Soundboards accompanied by the original invoice. Accessories are covered by their respective brand or supplier guarantees. The warranty does not cover normal wear such as natural ageing (scratches or fading), damage resulting from improper maintenance, nor damage due to indirect causes or negligence. The customer must inform JMC Lutherie SA in writing and in detail of any potential hidden flaw within 15 days of taking delivery of the goods. If such a report is not received, the product is considered to be exempt from any such flaws.

### Delivery & Returns

The customer undertakes to check the goods immediately upon taking receipt of them. If any damage or irregularities are observed, he must mention them on the shipment documents and inform the forwarding agent. JMC must be informed in writing within 5 days. Beyond this deadline, the customer loses any right to reimbursement. Import taxes are payable by the customer, who undertakes to settle them. JMC creations are unique because they are made from natural wood, which means that certain slight differences (in size or appearance) between various items may occur due to the wood fibre structure. If no prior arrangement has been made, the cost of any returns must be covered by the customer and the original packaging (of which an empty version may be pre-ordered) to ensure appropriate protection.

### Applicable law

Swiss law. The Vienna Convention is in no way applicable. The place of jurisdiction is Le Chenit, Vallée de Joux, Switzerland.

User Manual JMC Nomade - version 1.0 / 11-2015 Copyright © 2015 JMC Lutherie SA. All rights reserved. The total or partial reproduction of this publication is prohibited in any form whatsoever without the written permission of JMC Lutherie SA. The most recent version is available at [www.jmclutherie.com](http://www.jmclutherie.com).



**JMC Lutherie SA**

Route de France 6  
PO Box 42  
CH - 1348 Le Brassus  
Switzerland

T +41 21 845 56 10  
[info@jmclutherie.com](mailto:info@jmclutherie.com)  
[www.jmclutherie.com](http://www.jmclutherie.com)